

**Double row sowing** –

The special drop tubes, manifolds and seed tray required to sow two rows simultaneously in the 128, 144, 162, 200, 216, 288 or 338 (special parts required) are mounted on the seeder in the same way as are the standard attachments. When double row sowing, the #2 pusher must start in the second row of the plug tray. It may also have shorter fingers.



Double row drop tube sows two rows of seeds per cycle.