


Blackmore Turbo/Needle/Gear Seeder Needle Cleaner Assembly - Installation

Parts

Needle Cleaner Assembly w/ straight hose bard and close nipple
1/4" NPT 45° plastic street L

Pull the hose off the hose barb on the output side of the Low Pressure Adjust Block. Remove the block and remove hose barb or Needle Cleaner Assy (if it is being repositioned to avoid pinch point). Replace the hose barb or Needle Cleaner Assy with 1/4" NPT 45° plastic street L so when the block is reinstalled on the machine the female end of the street L is pointing toward the motor on the machine. Thread the needle cleaner assembly into the street L and reinstall the low pressure adjust block onto the machine. Reconnect the hose.

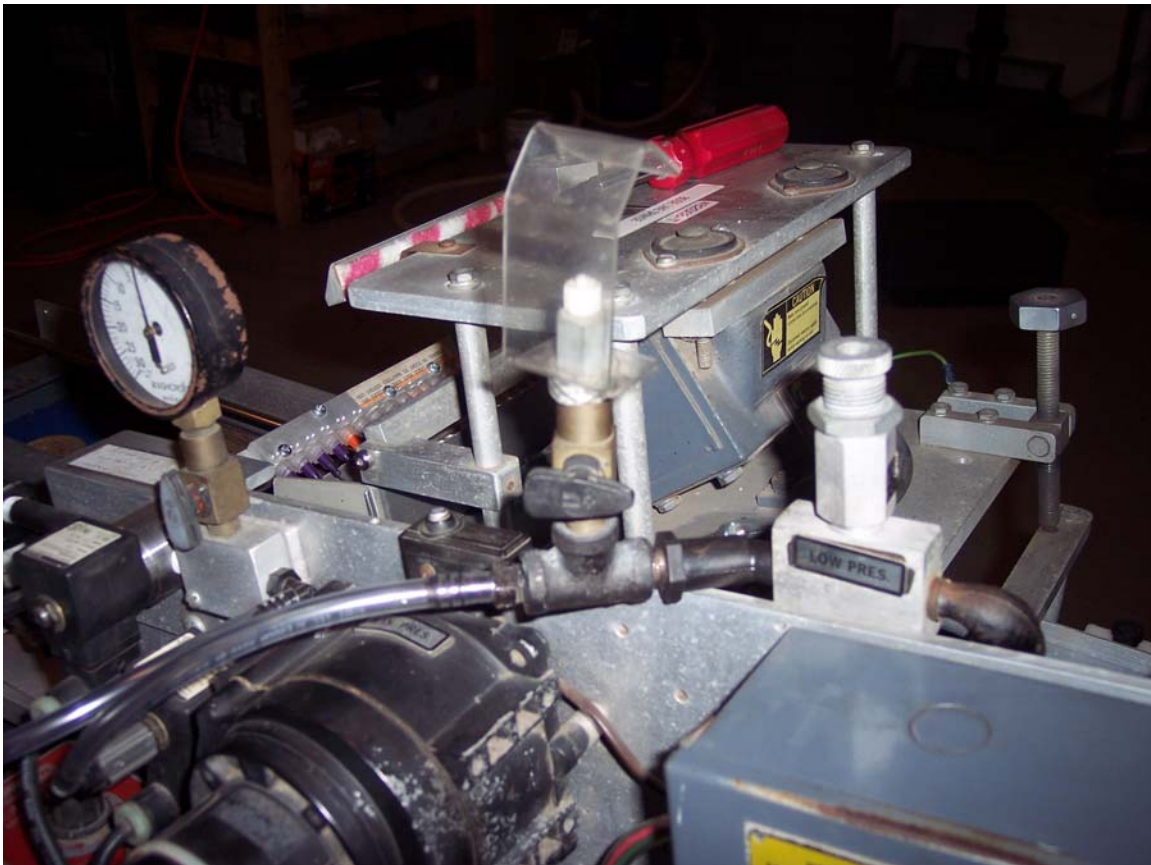

Any questions call Blackmore at (800) 874-8660



Blackmore Company Inc.

10800 Blackmore Avenue, Belleville, MI, USA 48111-2500

USA/Canada (800) 874-8660 • Int'l (734) 483-8661 • Fax (734) 483-5454 /2387

www.blackmoreco.com • email: info@blackmoreco.com

October 2008