

# BLACKMORE COMPANY, INC

10800 BLACKMORE AVENUE


BELLEVILLE, MI 48111

1 (800) 874-8660 / (734) 483-8661

FAX: (734) 483-5454

www.blackmoreco.com

## SEED WIPE OFF ASSEMBLY INSTRUCTIONS

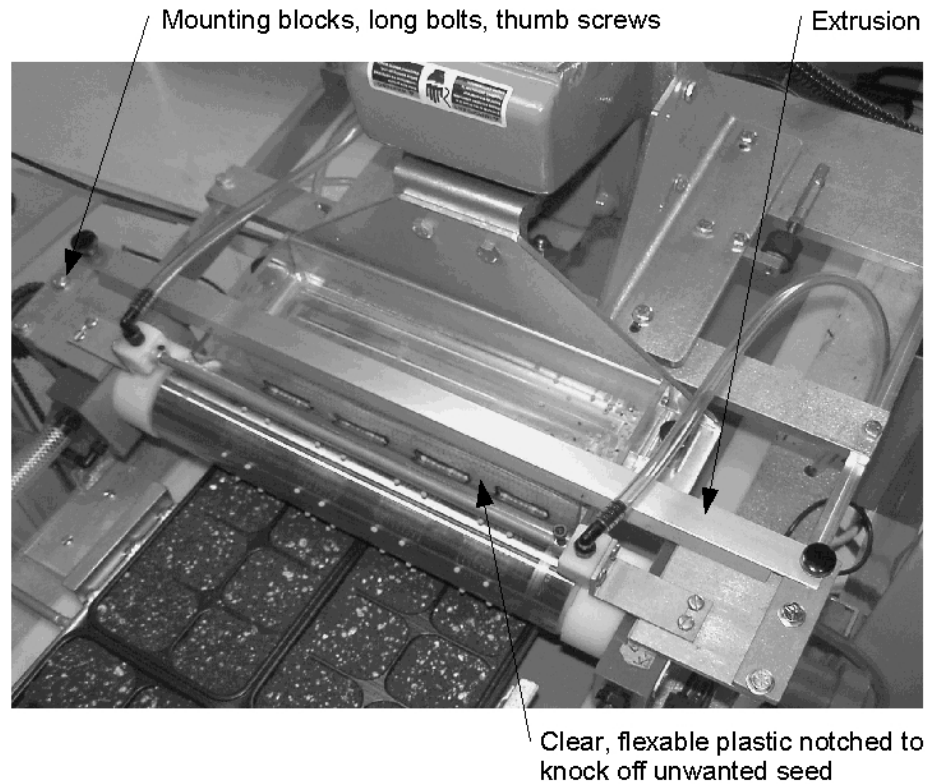

1. Important! Remove the chain!
2. Raise the cylinder head until the tray being sown clears the cylinder by 1/4" to 3/8".
3. Remove the four bolts holding the cylinder head down and install the seed wipe off mounting blocks per above picture. Use the longer bolts supplied. Install blank flexible plastic piece (approximately 1.75"x10.5") in the extrusion and attach to blocks using the thumb screws. Tuck plastic into seed tray side of cylinder.
4. By looking at the pick-up holes in the cylinder head, determine which rows are required to obtain desired results. With a marking pen, define the cut outs which will allow the desired seed to be sown.
5. Remove the extrusion and plastic piece and using sizzors, cut notches. (This example shows a 288 cylinder placing 2 seeds per cell into 6-06 flats, wiping off 4 rows of seed). Re-install extrusion and plastic.
4. Install the chain. Added links may be needed to lengthen the chain due to the required height of the cylinder.
5. Adjust row spacing to desired length by inserting row dimension in PLC seeder display or installing proper sprockets if using a clutch/brake machine.

9/19/02